

EUROPEAN COPPER DECORATIVE CAP





Models: King-TC, Pawn-TC, Bishop I-TC & Bishop II-TC For Direct Vent Termination Caps

European Copper Decorative caps.

Models King-TC, Pawn-TC, Bishop I-TC and Bishop II-TC have been tested and are approved for use with all Town and Country fireplaces that are vented vertically through the roof.

Only models with the "TC" extension will fit Town and Country Terminals. These shrouds are designed with the cap internal shield removed to allow the "TC" Termination Cap to fit up inside the shroud cap.

Check with your local building code agency before you begin installation to ensure compliance with local codes including the need for permits and follow-up inspections.

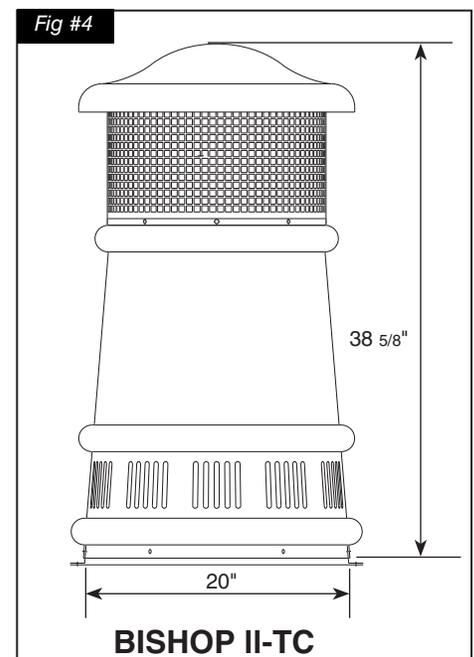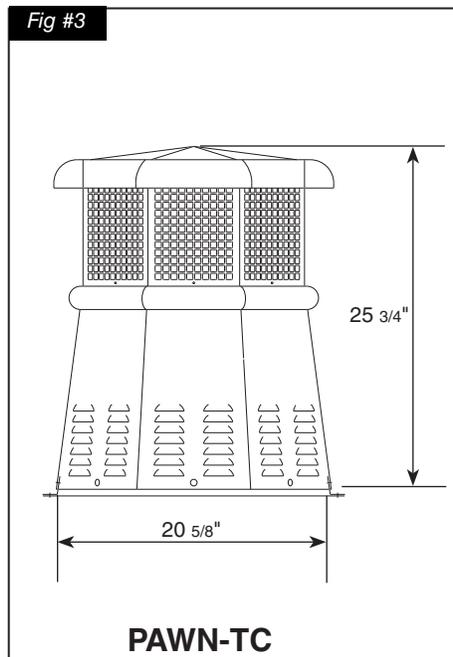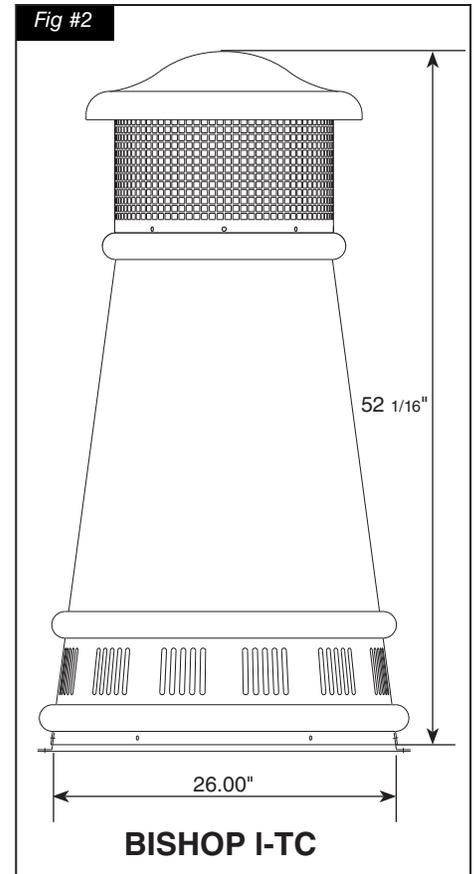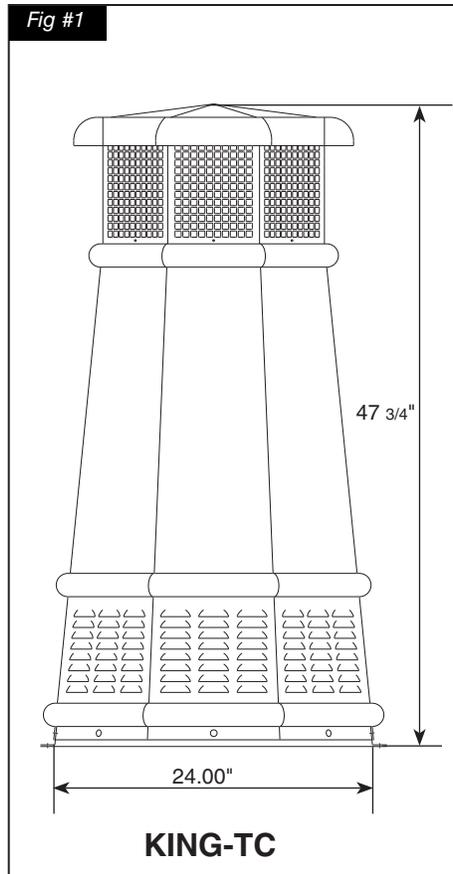

Installation

1. Install the vent system as per installation instructions supplied with the Town and Country fireplace. The vent pipe must extend the specific height above the chase top as shown in the table. If it extends higher, the decorative cap will not fit over-top of the terminal, and if shorter, the fireplace will not operate safely. Place an appropriately sized flashing and storm collar over the vent pipe and seal. Ensure the flashing size will not impede the installation of the decorative shroud.

2. Remove weather shield/rain cap from chimney pot base if attached. Save screws for later re-attachment. (Fig #6)

3. Attach all 8 mounting brackets to chimney pot base with carriage bolts, washers, & lock nuts.

NOTE:


The mounting brackets are designed to allow for drainage. **DO NOT** add grout or sealant around the base of the chimney pot.

Position chimney pot over vent, make sure pot is centered. Level chimney pot by adjusting brackets as necessary. When chimney pot is level, tighten nuts to secure brackets in place. Mark bracket hole locations on chase top. Remove chimney pot and drill holes in marked locations. Set flashing gaskets over each drilled hole with vinyl side up. Set chimney pot in place with brackets on gaskets. Anchor pot to chimney top with correct fasteners. Tighten each fastener securely. Caulk all fasteners connecting the chimney pot to the top of the chimney.

4. Lower the Town and Country roof vent termination cap over the vent pipe and secure in place with screws provided. Seal the screw heads and joint with caulking to prevent any moisture entering the vent systems.

5. Lower weather shield/rain cap over the Town and Country Termination Cap and attach to chimney pot base with screws previously removed.

Fig #5

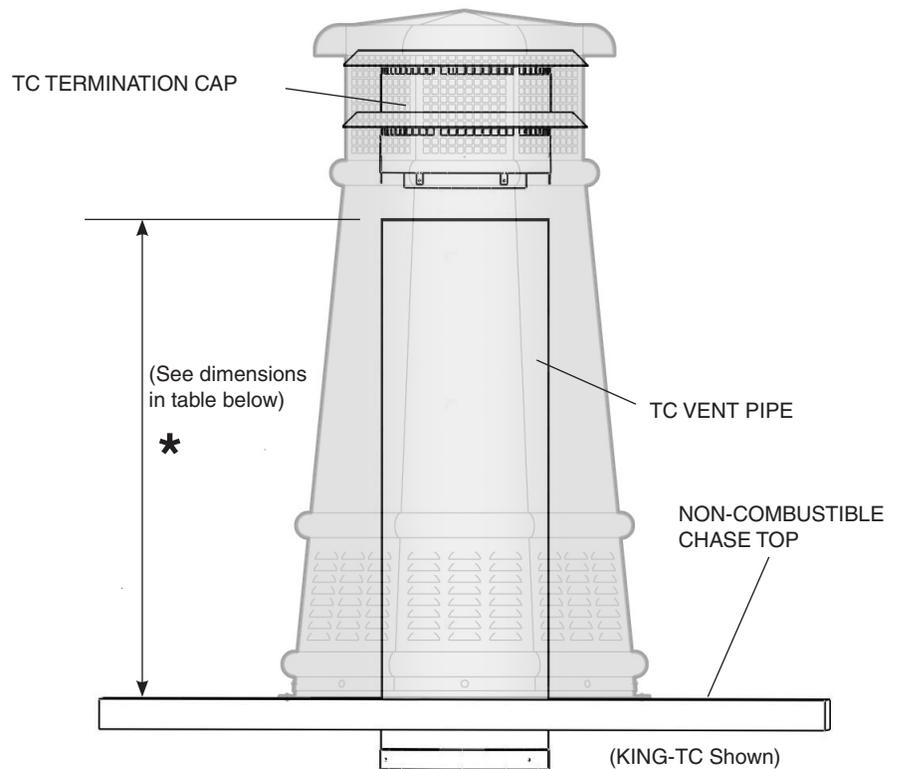

*

Model	Dimensions above chase top
King-TC	39 "
Pawn-TC	17"
Bishop I-TC	40 1/2"
Bishop II-TC	27 1/8"

Fig #6

